


Fitting Instructions

WIN2000 & WIKO5000 air pipe heads (all types and sizes)

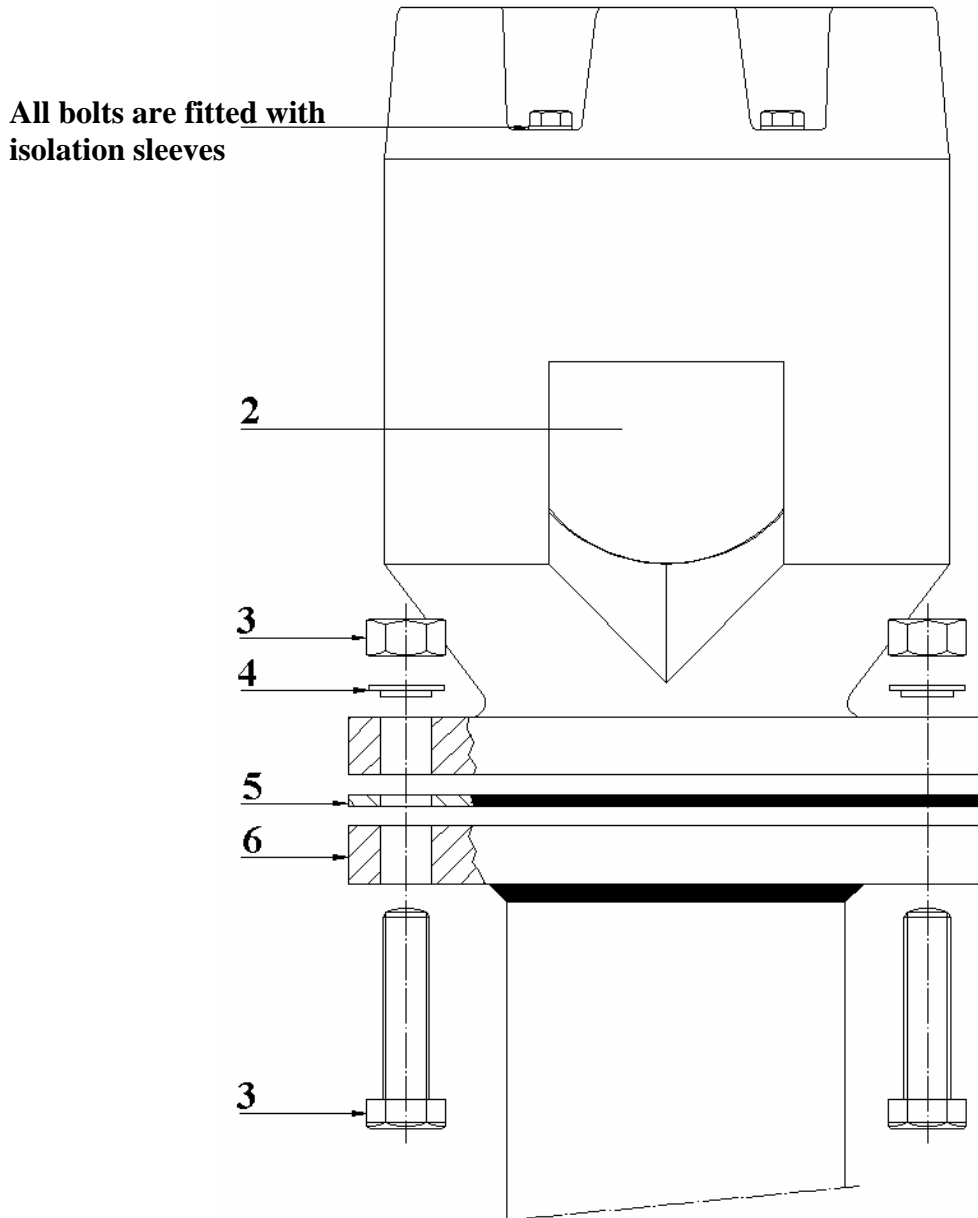

1. Do not paint flame screen (if fitted)
2. Check regulations if a flame screen is needed when the air pipe head is used on a ballast tank. If not, remove the flame screen when the air pipe head is used on ballast tanks.
3. Remove ball protection cover after painting, do not paint the float ball
4. Use galvanised or stainless steel bolts and nuts (available at WINTEB)
5. Use isolation sleeves (supplied by WINTEB)
6. Use full size gasket (available at WINTEB)
7. Use flat face counter flanges (available at WINTEB)

If you have any questions please contact us

Tel. 0031597412252

Fax. 0031597420494

e-mail info@winteb.nl